

Type RV - Tableau des dimensions disponibles en standard

Diamètre de vis (D)	Nombre d'entrées (N)	Pas (P)																			
		1	2	3	4	5	6	8	10	12	15	18	20	24	25	30	35	36	40	42	50
3,5	3	X	X																		
5	3	X	X	X																	
7	4	X	X	X	X																
8	4	X	X	X	X	X															
10	4	X																			
	5		X	X	X																
12	4	X																			
	5		X	X	X	X	X	X													
15	5		X	X	X	X	X	X	X												
18	5		X	X	X	X	X	X	X	X											
20	5		X	X	X	X	X	X	X	X	X										
21	5		X	X	X	X	X	X	X	X	X										
23	5		X	X	X	X	X	X	X	X	X										
25	6			X																	
27	5		X		X	X	X	X	X	X	X										
30	5		X		X	X	X	X	X	X	X	X									
36	6				X																
39	5		X		X	X	X	X	X	X	X	X									
44	6				X																
48	6				X	X	X	X	X	X	X	X									
51	5				X																
56	6				X																
60	6				X	X	X	X	X	X	X	X									
64	5				X																
70	6				X	X	X	X	X	X	X	X									
75	5				X																
80	6				X	X	X	X	X	X	X	X									
87	5				X																
92	6				X	X	X	X	X	X	X	X									
100	6				X	X	X	X	X	X	X	X									
	5				X																
120	6				X	X	X	X	X	X	X	X									
	5				X																

X	N = 3
X	N = 4
X	N = 5
X	N = 6



RV 12 x 8



RV 30 x 30



RV 39 x 10

Diagramme des capacités dynamiques Ca des vis à rouleaux satellites en fonction des géométries des gammes standards RV et HRV

