

Type RVR - Tableau des dimensions disponibles en standard

Diamètre de vis (D)	Pas (P)						
	0,25	0,5	1	2	3	4	5
8	X	X	X	X			
10	X	X	X	X			
12	X	X	X	X			
16		X	X	X			
20		X	X	X			
25			X	X			
32			X	X		X	
36			X	X			
40			X	X		X	
50			X	X	X	X	
63				X	X	X	
80				X	X	X	
100					X	X	X
125							X

Type RVR



RVR 12 x 1